



Vehicle & Operator Services Agency

Instruction to VTS for replacement of pages in the Car and Light Commercial Vehicle Inspection Manual

Each page replacement page is single sided and contains the words “Temporary Replacement Page” in the header. These pages should be either glued or stapled over the top of the appropriate existing pages within the Inspection Manual.

Table of Replacement Pages

Section Title and section content	Page number
Introduction – Abbreviations and definitions	1
Introduction – Abbreviations and definitions	2
Introduction - Introduction	7
Introduction – How To Use This Manual	8
Introduction – How To Use This Manual	9
1.6 – Headlamp Aim	1
1.6 – European ‘E’ Beam Headlamp (Checked on Dipped Beam)	3
2.2 – Steering System	1
2.2 – Steering System	2
2.2 – Steering System	3
2.5 – Front Suspension, Wheel Bearings and Drive Shafts	1
2.5 – Front Suspension, Wheel Bearings and Drive Shafts	2
2.5 – Front Suspension, Wheel Bearings and Drive Shafts	4
2.5 – Front Suspension, Wheel Bearings and Drive Shafts	5
3.5 – Mechanical Brake Components	1
3.5 – Mechanical Brake Components	2
3.7 – Brake Performance	2
3.7 – Brake Performance	3
3.8 – Method of Calculating Brake Performance	1